

# BOLT PATTERN and BACKSPACE



**4-Lug Pattern**  
Measure the distance between the centers of opposite holes




**5-Lug Pattern**  
Measure the distance from the center of one hole to the **far side** (not center) of a non-adjacent hole



**6-Lug Pattern**  
Measure the distance between the centers of opposite holes



**8-Lug Pattern**  
Measure the distance between the centers of opposite holes

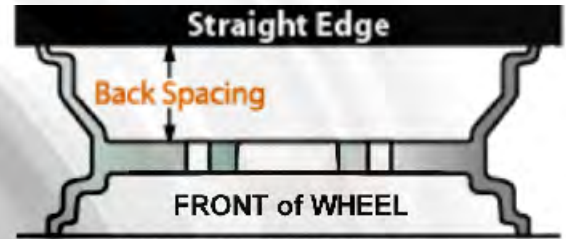

## BACK SPACE

The distance from the back edge of the wheel to the hub mounting surface. To determine the wheel backspace position the wheel face down. Lay a straight-edge across the back of the wheel. Measure the distance from the straight edge to the wheel's hub mounting surface.

## Warranty Disclaimer

The useful service life of equipment used in racing can vary from seconds to years depending on conditions. The purchaser alone can judge if this product is suitable for the intended application. Use of this product signifies that the purchaser has examined it and accepts it "as is" and "with all faults", and accepts responsibility for any accidents or injuries as a result of its use. Sherwood Racing Products has no control over conditions of use and makes no warranty, written or implied, to users.

**SHERWOOD**  
**Racing Wheels**

Sherwood Racing Products, LLC  
1074 Sulphur Springs Rd.  
Owego, NY 13827  
Phone: (607)687-2991  
Fax: (607)687-4931  
[www.sherwoodracingwheels.com](http://www.sherwoodracingwheels.com)

